

Photo:

1



Peugeot - Citroen
W/H AP800 Part no: 190-5000090

Plug and Play available

2



Fiat
Hyundai
Iveco
Ssang Yong
Kia
UAZ

3



Nissan
Mitsubishi
Fiat
Suzuki

4



Kia
Hyundai

5



Toyota
Nissan

6



Hyundai Sonata 2.4
Chrysler Sebring
Dodge Avenger, Caliber
Mitsubishi Outlander, Lancer
Peugeot 4007
Citroen C-Crosser

7



Renault
Opel
Nissan
Peugeot
Citroen
VW
Audi


8



Peugeot Potentiometer under bonnet
Citroen Potentiometer under bonnet
Suzuki Potentiometer under bonnet

W/H AP800 Part no: 190-500050W

9

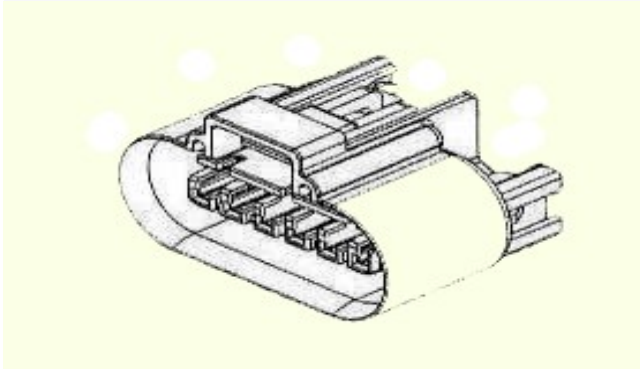

Ford Fiesta
Land Rover Freelander
Mazda-2

10



VW Golf 5
VW Passat 2005>

11



New Toyota;
Aygo
Yaris
RAV4 2006>

Mazda:
2, 6, CX7

Subaru

12



Renault:
Modus
Mégane
Scenic

Nissan:
Cabstar

Dacia:
Lodgy

13



Mazda:
6
MX5 (2006)
RX8

Toyota
Raider (Hi-lux)

Mitsubishi
Grandis, L200, Pajero

14



Honda

CRV/HRV

W/H AP800 Part no:
190-5000510

15




Honda
Jazz

16




Citroen, Peugeot

17

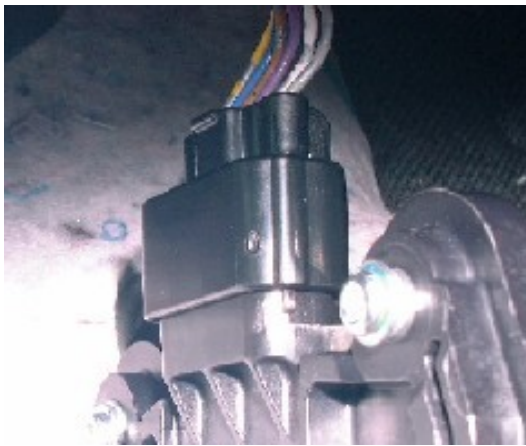

Civic 2006>
CRV 2007>

18

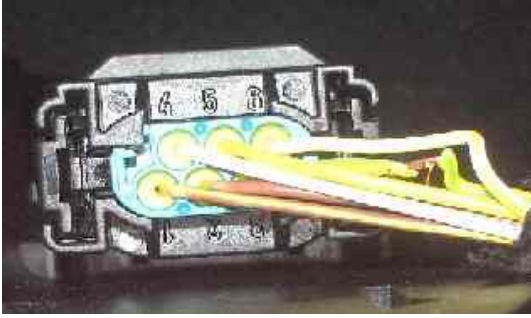

BMW 118
Mercedes A, B, Sprinter
Mini
SsangYong Rexton 230

19




PT Cruiser 2000-2006

20



Fiat Panda
Fiat 500
Lancia Ypsilon

21

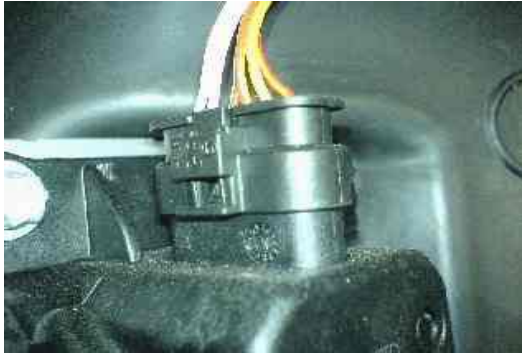

Mercedes

C-class
Sprinter
Vaneo
Viano
Vito

VW

Crafter

22



Ford:

C-Max
Focus 2004>
Galaxy 2006>
Mondeo 2007>
S-Max 2006>
Transit 2006>
Transit Connect 2007>

Volvo

C30
S40
V50
C70
V70
S80

Mazda

LandRover

3 Freelander 2

23



Ford

Ranger

Mazda

BT-50


24



Chrysler
Voyager CRD
Dodge
Ram Van

Isuzu
D-Max
Chevrolet
Colorado / D-Max

25

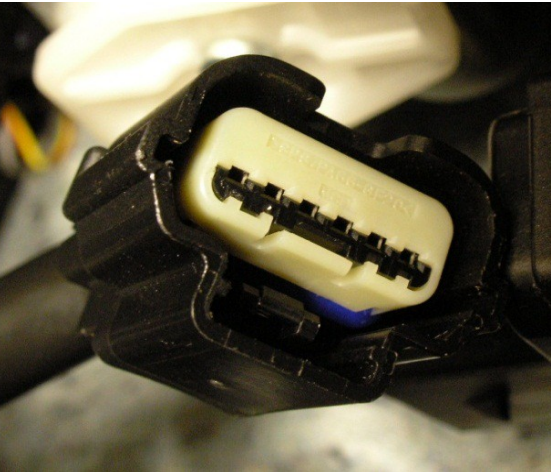

Chrysler
Grand Voyager
Dodge
Nitro
Ford
Focus USA
Focus 2011-
C-Max 2011- / Grand C-Max
Mazda
3, 6
Chevrolet
Spark
Jeep
Wrangler

26



Fiat
Scudo
Peugeot

Citroen

27



Honda
Jazz
Fit
Insight

28



Toyota
Verso-S

Subaru
Trezia

29



Ford
Edge
Flex
Fusion (USA)
Transit 125T 350 (EU)
F150
F350

Range Rover